

Operations Manual



Automated Fuel Maintenance System

FTI-10A & FTI-20A



FUEL TECHNOLOGIES INTERNATIONAL LLC

Replacement Manuals Available on Website: www.fueltech.us

Controller Programming And Operations

Contents

<i>Introduction / Overview</i> -----	<i>Page 2</i>
<i>Controller Set-Up with the Touch Screen</i> -----	<i>Page 3</i>
<i>A. Default Start-Up Screen</i> -----	<i>Page 4</i>
<i>B. Menu Screen</i> -----	<i>Page 5</i>
<i>C. Company Information Screen</i> -----	<i>Page 6</i>
<i>D. Clock Adjust Screen</i> -----	<i>Page 7</i>
<i>E. Set-Up Number of Tanks Plumbed To the System Screen</i> -----	<i>Page 8</i>
<i>F. Select the Day of the Week & Tank Number to Run Screen 1</i> -----	<i>Page 9</i>
<i>G. Select the Day of the Week & Tank Number to Run Screen 2</i> -----	<i>Page 10</i>
<i>H. Set-Up Tank Filtering Run Times Screen</i> -----	<i>Page 11</i>
<i>I. Set-Up Daily Filtering Start Times Screen</i> -----	<i>Page 12</i>
<i>J. Set-Up Pump, Solenoid Valves, & Alarm Delays Screen</i> -----	<i>Page 13</i>
<i>K. Set-up Flow Switch Alarm Delay Screen</i>	<i>Page 14</i>
<i>L. Main Operations Screen</i> -----	<i>Page 15</i>
<i>Alarm Descriptions</i> -----	<i>Page 16</i>
<i>How to Run In Manual and Auto Modes</i> -----	<i>Page 17</i>

FTI - Fuel Maintenance Systems

Introduction

This manual assumes the system is installed and ready for operation. If the system has not yet been installed, please refer to the Installation manual for instructions.

Overview

FTI Fuel Monitoring and Maintenance Systems are designed for ease of use. Once installed, the system will operate automatically to the schedule you program into it. The schedule should be determined by your specific needs, fuel and tank conditions, weather, etc. and can be changed at any time. ***It is recommended to filter approximately 20% of the tank per week.*** (If you are not sure what your optimum schedule might be, your FTI representative can assist you).


Your FTI system will maintain all data input by you, such as the time, run time hours, and number of tanks, etc. This will last for up to 100 hours without power. After that, the data will have to be re-entered.

If the system is in auto mode and stopped for any reason, it will resume the schedule when the interruption is complete. You can also switch to manual mode at any time. The system will resume with the preprogrammed schedule when put back into auto mode.

Depending on the condition of the fuel to be maintained, you may initially be changing filters more frequently than expected. Your FTI system will stop operation and signal you when filters are full. It will also let you know which particular filter should be changed, and will resume the program when restarted after the filter is replaced. As the fuel quality progressively increases, you will notice a dramatic drop in filter usage.

In cases of ***Serious Contamination***, it is recommended that you have your ***Fuel Polished*** prior to initial use of your FTI system. Since the FTI system is proactive, continued use prevents the fuel from deteriorating again and maintains a healthier environment to protect both the fuel and tank.

Controller Set-Up with the Touch Screen

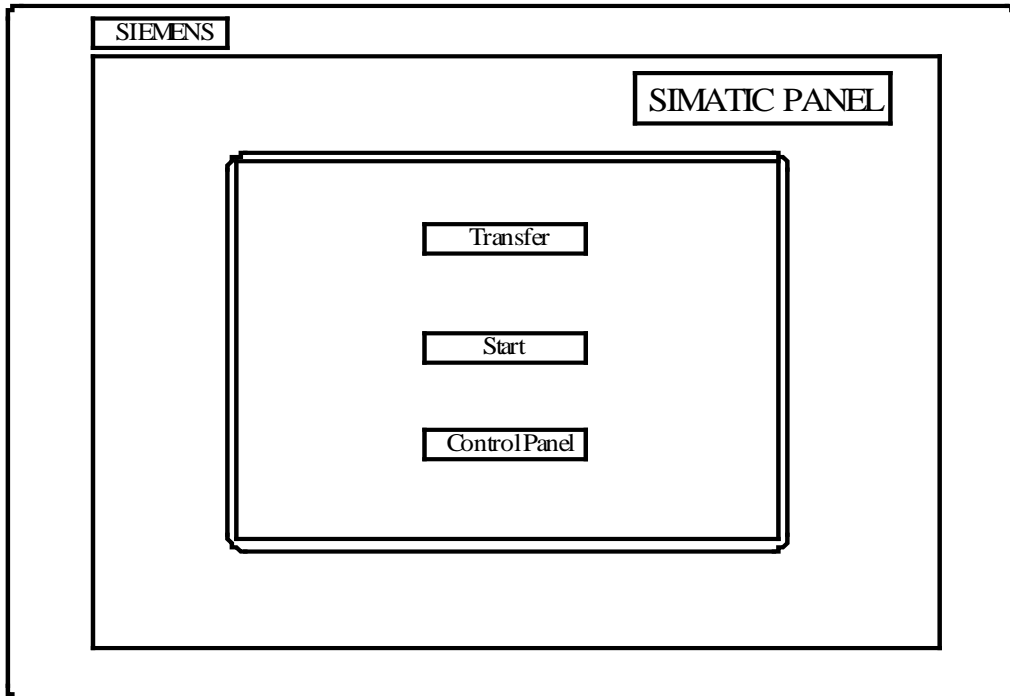


Once the Fuel Management System is installed, you're ready to program the controller.

When you apply power to the system, the display will go through a boot up sequence, and the screen above will appear for a few seconds. ***DO NOT PUSH ANY BUTTONS ON THIS SCREEN.***

IF YOU DO PUSH A BUTTON ON THIS SCREEN, TURN THE POWER OFF AND THEN BACK ON TO RE-BOOT THE CONTROLLER.

Wait until this screen above changes to the default ***Main Operations Screen*** (next page).

Default Start-Up Screen

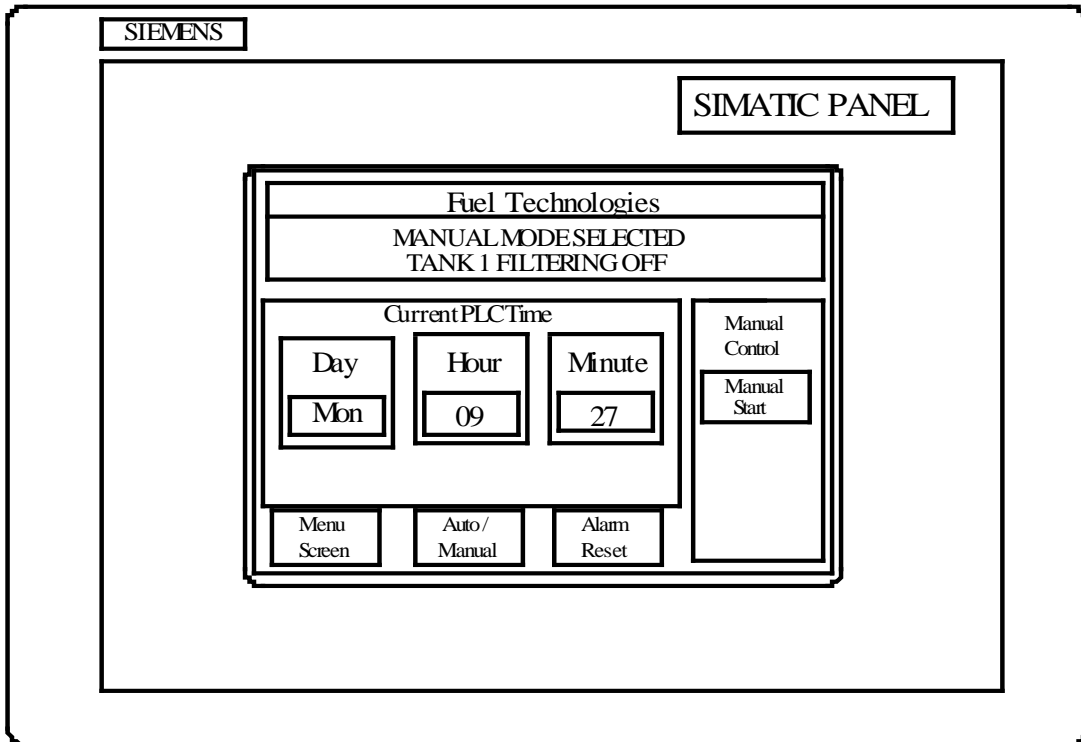


The screen above is the *Main Operations Screen*.

From this screen You Can:

1. Go to the Menu Screen.
2. Switch from Auto Mode to Manual Mode.
3. Reset All Alarms.
4. Turn system On & Off in Manual Mode.

To Set-Up the Controller Press the Menu Screen Button.

Menu Screen

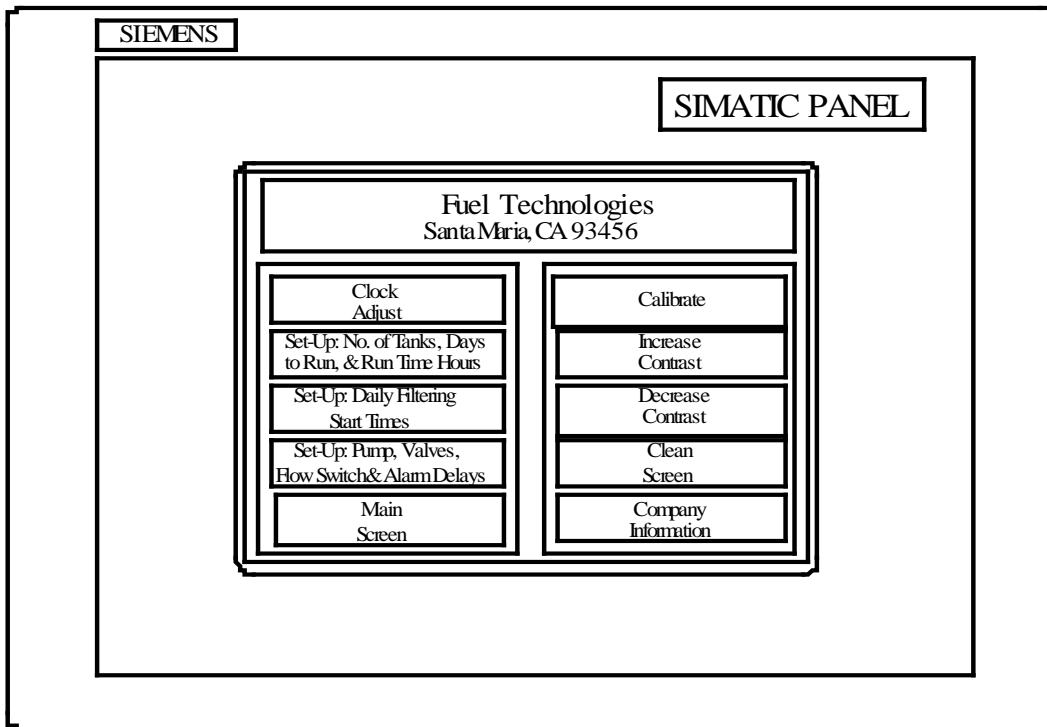

The screen above will appear.

This is the screen to access all system filtering selections.

From the left hand column you can:


1. Adjust the clock.
2. Set the number of tanks; Select which days of the week to run, and the Run Time Hours.
3. Select daily filtering start times.
4. Set-up; 1. Pump start delay, 2. Flow Switch alarm delay, 3. Solenoid or actuated ball valve close Delay (Multi-tank systems), 4. All Alarm delays
5. Access the main operations screen, from where you can manually turn system on and off.

From the right hand column you can:

1. Re-calibrate the screen.
2. Increase the contrast on the screen.
3. Decrease the contrast on the screen
4. Clean the screen.
5. Look up Fuel Technologies company information.

Next Press the Company Information Screen Button.

Company Information Screen

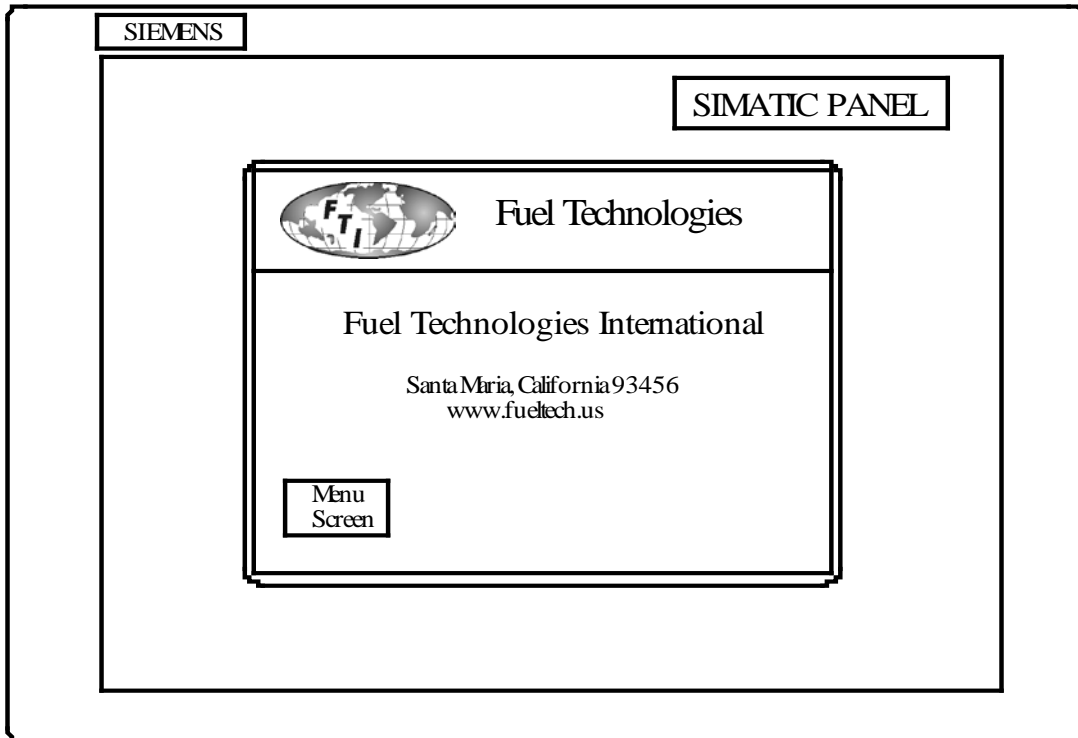


The screen above is the *Company Information Screen*.

This is where you can look up Fuel Technologies:

1. Address
2. Web site information

Next Press the Menu Screen Button, Then the Clock Adjust Button.

Clock Adjust Screen

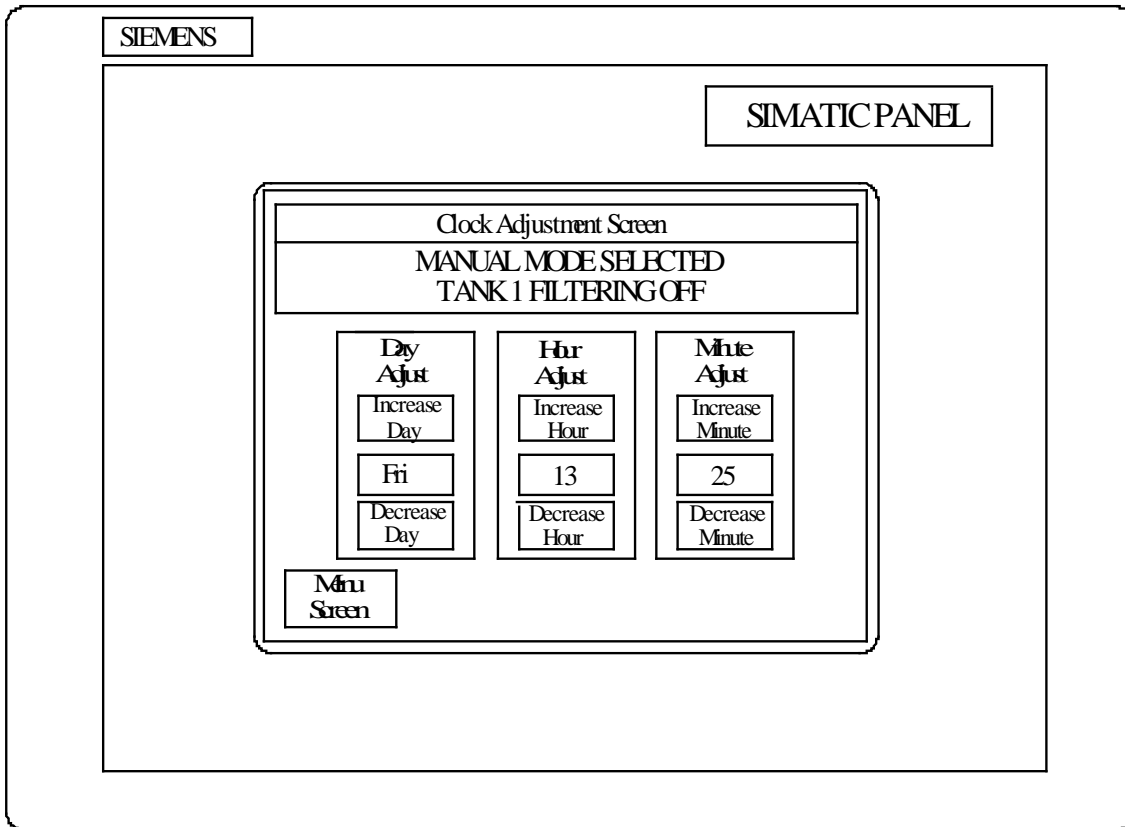


The screen above will appear.

1. Start on the left column under **Day Adjust**; press the **Increase** or **Decrease Button** until the correct day appears.
2. Do the same for the **Hour Adjust** and the **Minute Adjust**.

When Completed Press the Menu Screen Button, Then the Set-Up No. of Tanks, Days to Run, & Run Time Hours Button

Set-Up: Number of Tanks Screen

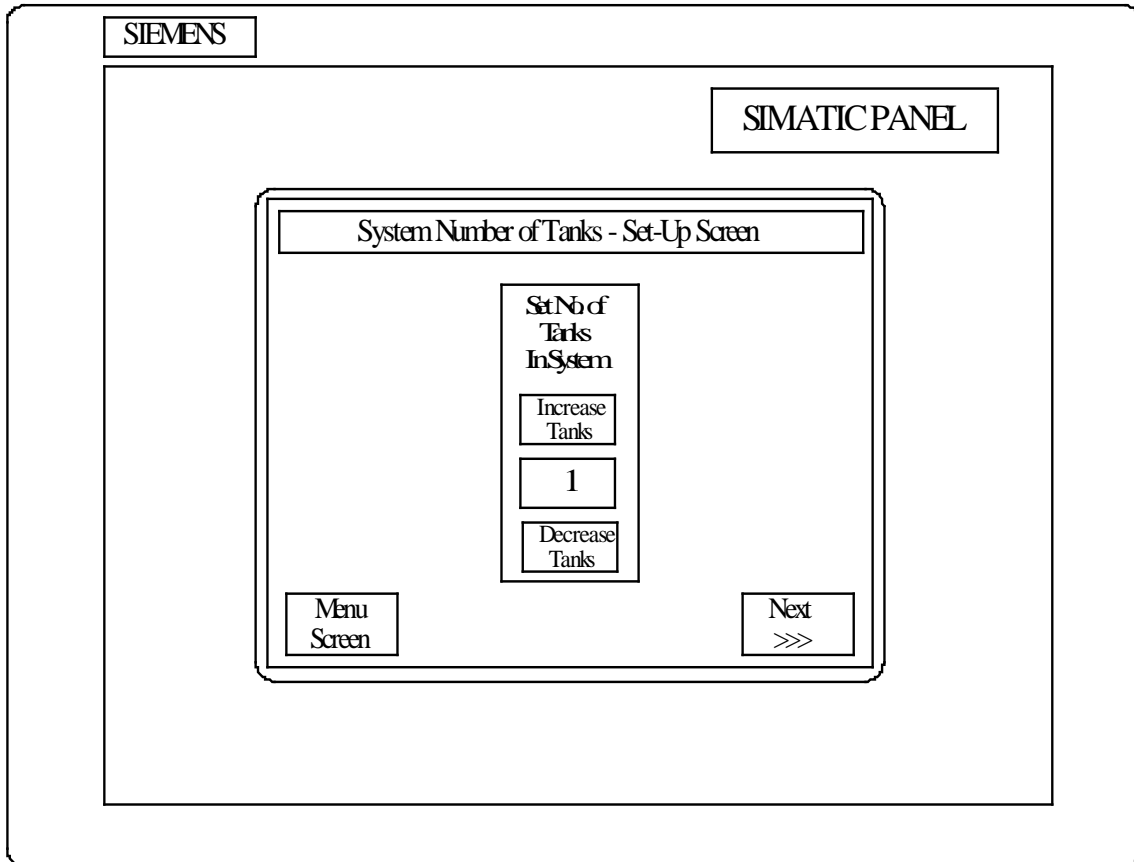


The screen above will appear.

1. Select the number of tanks; plumbed to the system (1-4), use the ***Increase & Decrease Button***.
2. When more than one tank is selected, additional buttons will appear on some screens, so you can access all the tanks in your system.
3. This system is capable of filtering up to four tanks.

Press the Next >>> Button

Select Day Of Week To Run & Tank No. (1-4) – Screen 1

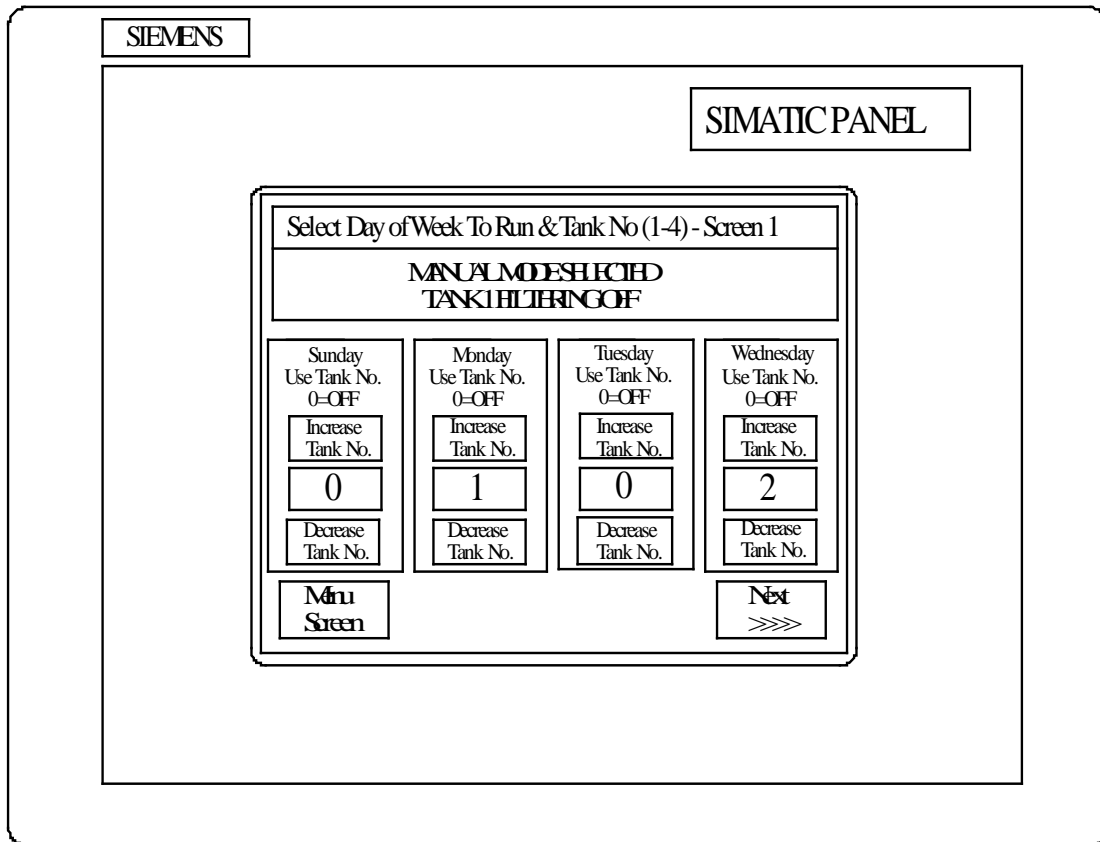


The screen above will appear.

1. First you need to decide what days of the week you want your system to run, & which tank you want to filter (if you have more than one).
2. Select the day of the week to run, and press the **Increase** or **Decrease Button** to choose the tank number to filter (1-4).
3. The example screen above shows filtering schedule as follows: Tank 1 on Monday and Tank 2 on Wednesday
4. The rest of the week is shown on the next page. (Screen 2)

Press the Next >>> Button

Select Day Of Week To Run & Tank No. (1-4) – Screen 2

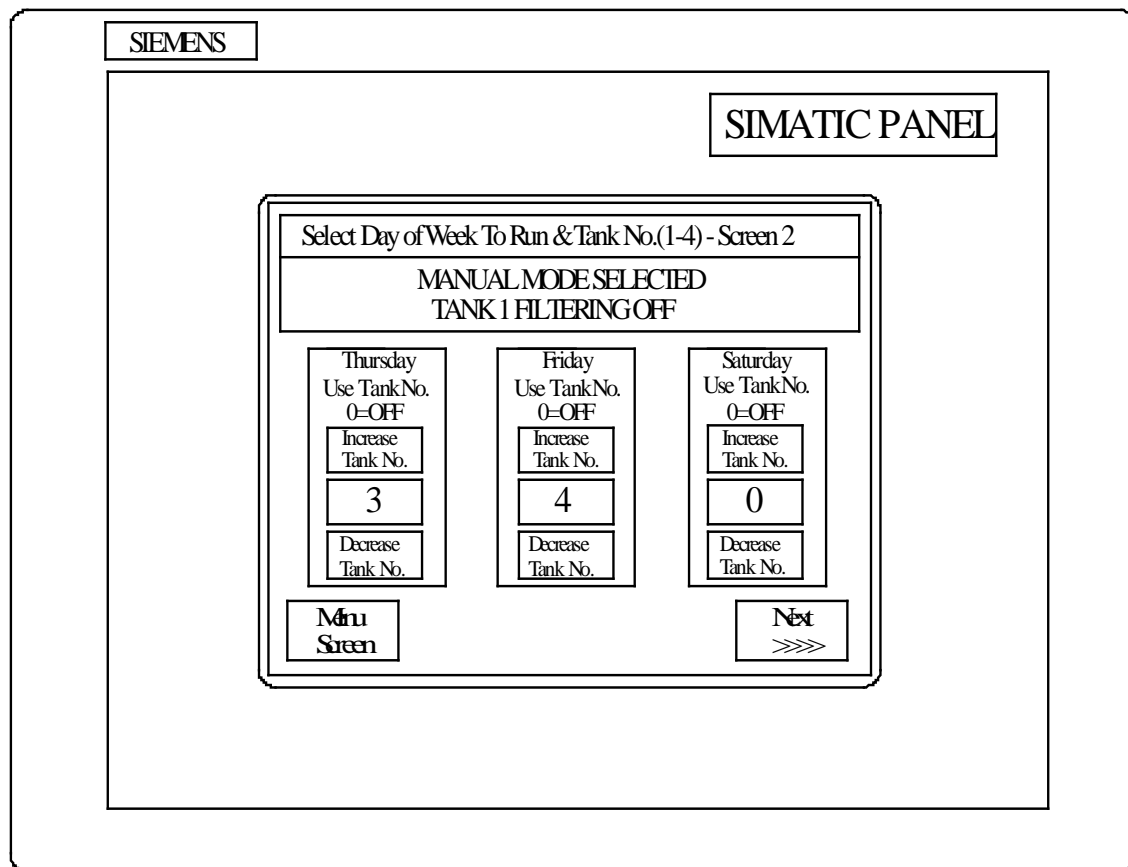


The screen above will appear.

1. Finish your filtering selections if any.
2. The example screen above shows the filtering schedule as follows: Tank 3 will be filtered on Thursday and Tank 4 will be filtered on Friday.

Press the Next >>> Button

Tank Filtering Run Times (hours) – Set Up Screen

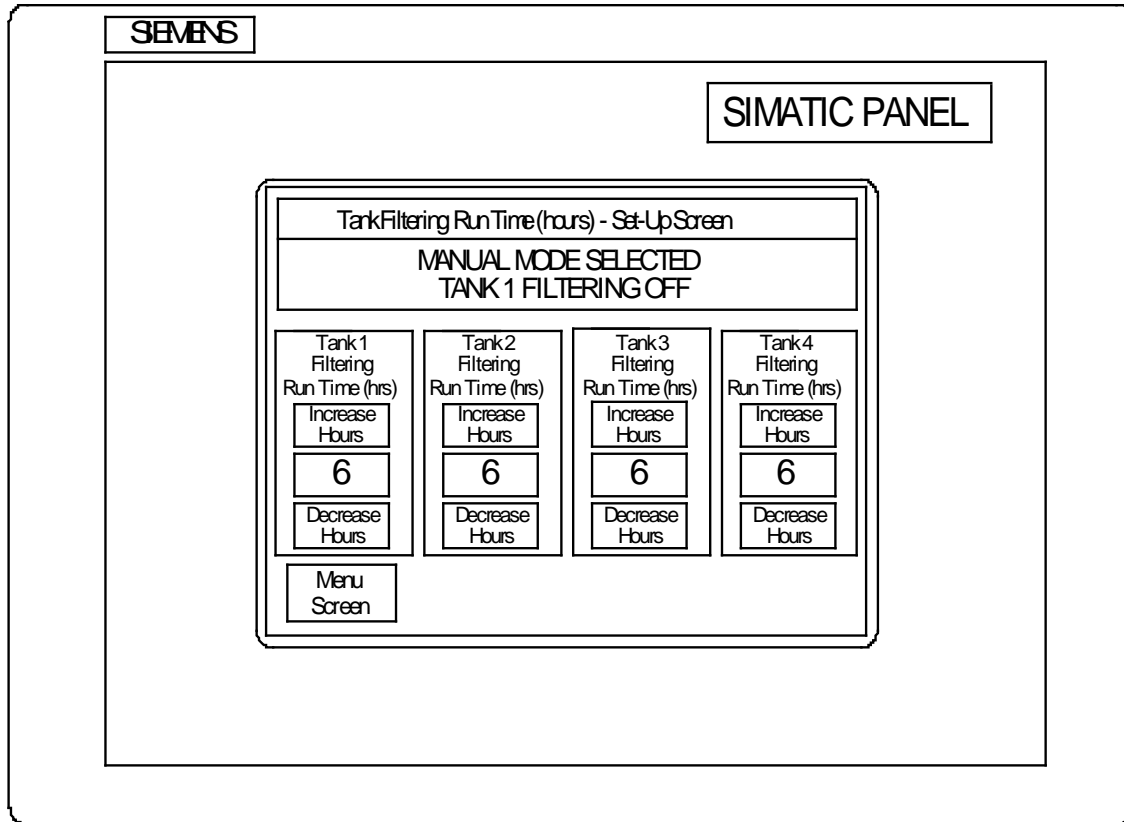


The screen above will appear.

1. On This screen you can select the run time hours to filter your fuel. (The recommended is 20% of the tank per week.)
2. Example: 20% of a 20,000 Gallon Tank = 4000 gallons.
3. Then take the pump size: 20 gallons a minute pump x 60 minutes = 1200 gallons an hour.
4. Then divide 1200 (gallons an hour) into 4000 gallons (20% of tank) = 3.33 hours per week.
5. Round up to 4 hours per week.
6. The screen above will only show the number of tank choices that you selected on the set-up number of tanks screen (Tank 1, Tank 2, Tank 3, or Tank 4).
7. Example: Above screen shows a 4-tank system, filtering all 4 tanks for 6 hours ea.

When Completed Press the Menu Screen Button, Then the Set-Up Daily Filtering Start Times Button

Set-Up Daily Filtering Start Times Screen

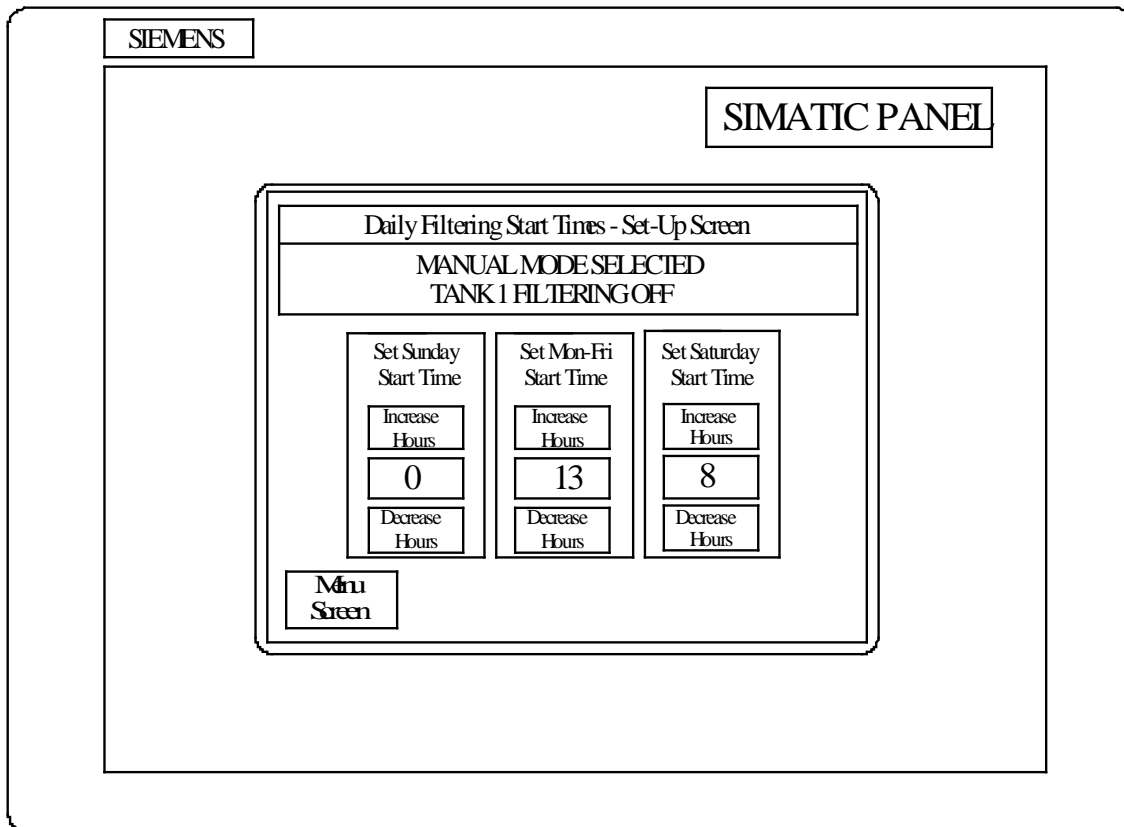


The screen above will appear.

1. Here you choose what time of day to start the filtering process.
2. You can select only one start time for Sunday, one start time for Monday – Friday, and one start time for Saturday.
3. The clock settings are (1-23) hours.
 - A. Example 1: 8 = 8AM
 - B. Example 2: 13 = 1:00 PM

When Completed Press the Menu Screen Button, Then the Set-Up: Pump, Flow Switch, Solenoid Valves, & Alarm Delays Button

Set-Up Pump, Flow Switch, Solenoid Valves, & Alarm Delays Screen

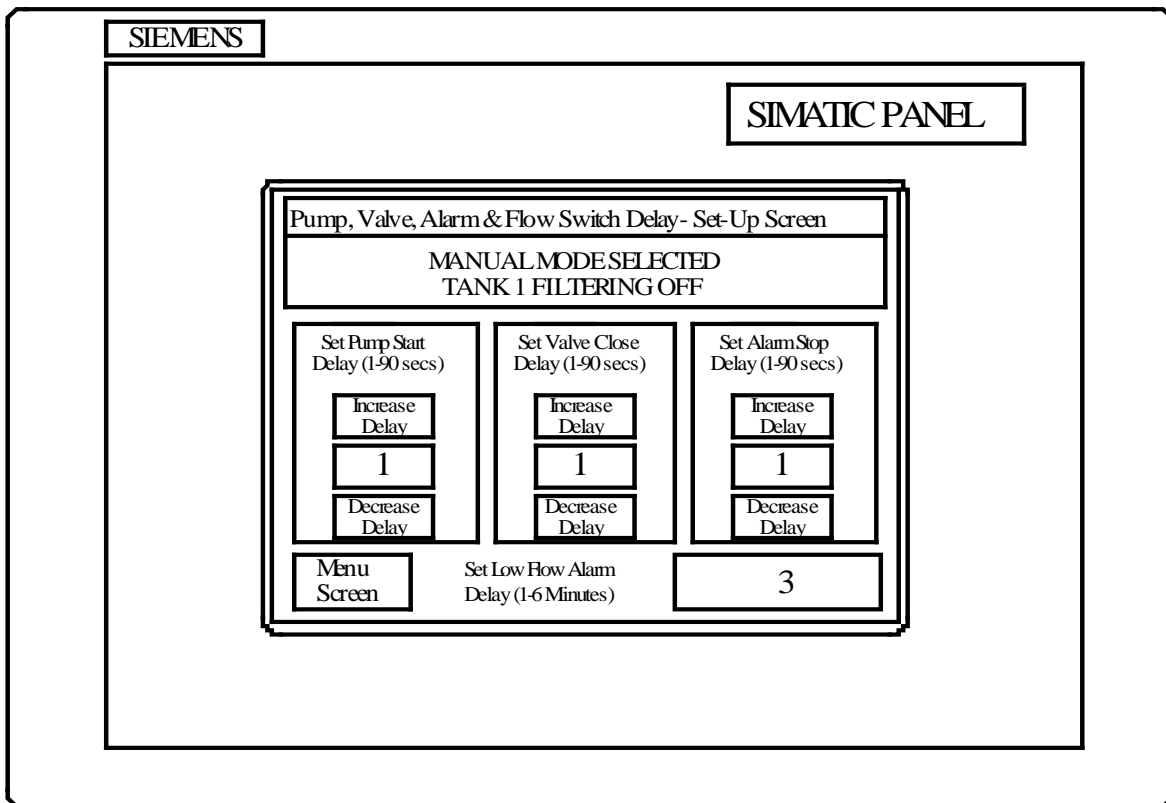

The screen above will appear.

If you have special circumstances, that require you to delay the pump to start, delay the solenoid valves to close (multi-tank systems), or delay the alarms from going off, then continue with this step, if not skip forward to the bottom of this page.


Here you can delay:

1. The pump from turning on by 1-90 seconds.
(When using ACTUATED BALL VALVES, the pump will need to be delayed allowing valves to open before pump is turned on. Adjust the pump delay start seconds to ball valve opening time.)
2. The solenoid or electric actuated ball valves from closing by 1-90 seconds. (multi-tank systems)
3. The alarms from sounding off by 1-90 seconds.
4. The correct default setting is for lines 1, 2, and 3 are 1.
5. The flow switch alarm (1-6 minutes – default is 3 minutes) this is a Flow or No Flow alarm.


To adjust the flow switch settings touch the number 3 in the window shown above. A new screen will pop up. Turn to next page to see the pop up screen.

***When Completed Press the Menu Screen Button,
Then the Main Operations Screen Button***

Change Flow Switch Alarm Delay Settings Screen
(DEFAULT IS FACTORY SET AT 3 MINUTES, ONLY ADJUST IF NECESSARY)

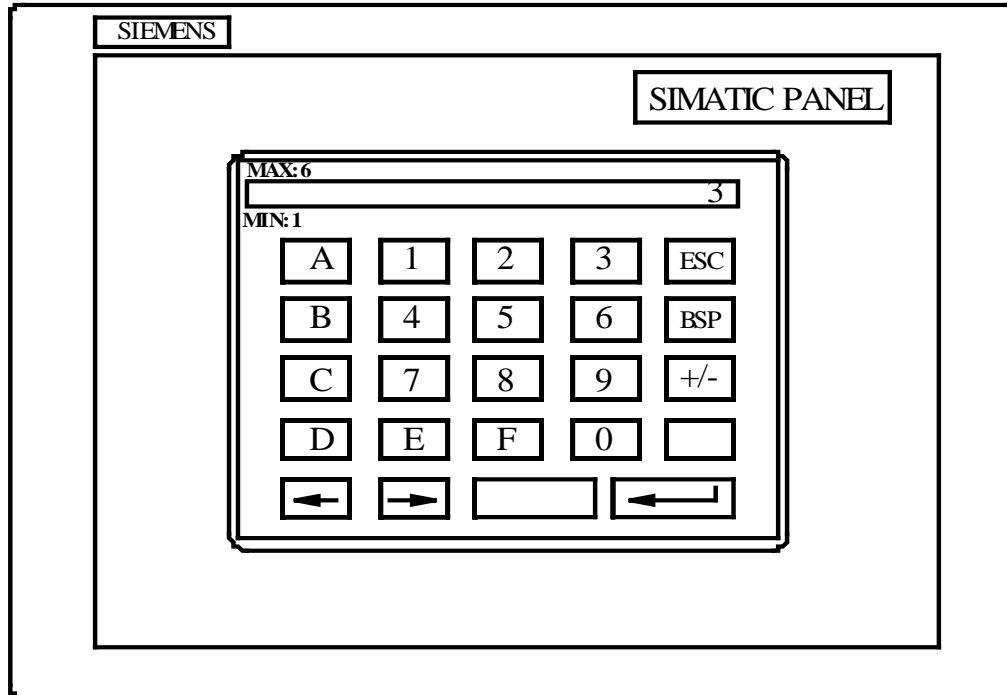

To adjust the Flow Switch Settings:


1. Touch the number of minutes (1-6) you want to set the alarm delay to.
2. Then touch the arrow key (bottom right) 
3. The number 3 shown above, (top right) will change to the new number.
4. The factory default is 3 minutes.

(The alarms task is to protect the pump in case it has lost its prime. The pump will run for the time selected and then sound an alarm to notify maintenance personal the fuel supply line is dry)

***When Completed Press the Menu Screen Button, Then the
Main Operations Screen Button***

Main Operations Screen

1. Here you can select **Auto Mode** or **Manual Mode** by pressing the **Auto/Manual Button**. Auto mode will run your system automatically by the **Start & Run Times** you have entered.
2. In **Manual Mode** the system will stand idle. (Put in Manual Mode for servicing the filters)
3. You can turn the system on and off in **Manual Mode**. Press the **Manual Start Button** to turn on. Press the same button now labeled **Manual Stop** to turn off.
4. When you set-up more than one tank there will extra buttons labeled **Next Tank (1-4)** and **Previous Tank (1-4)**, use these buttons to scroll to tanks 2, 3, & 4.

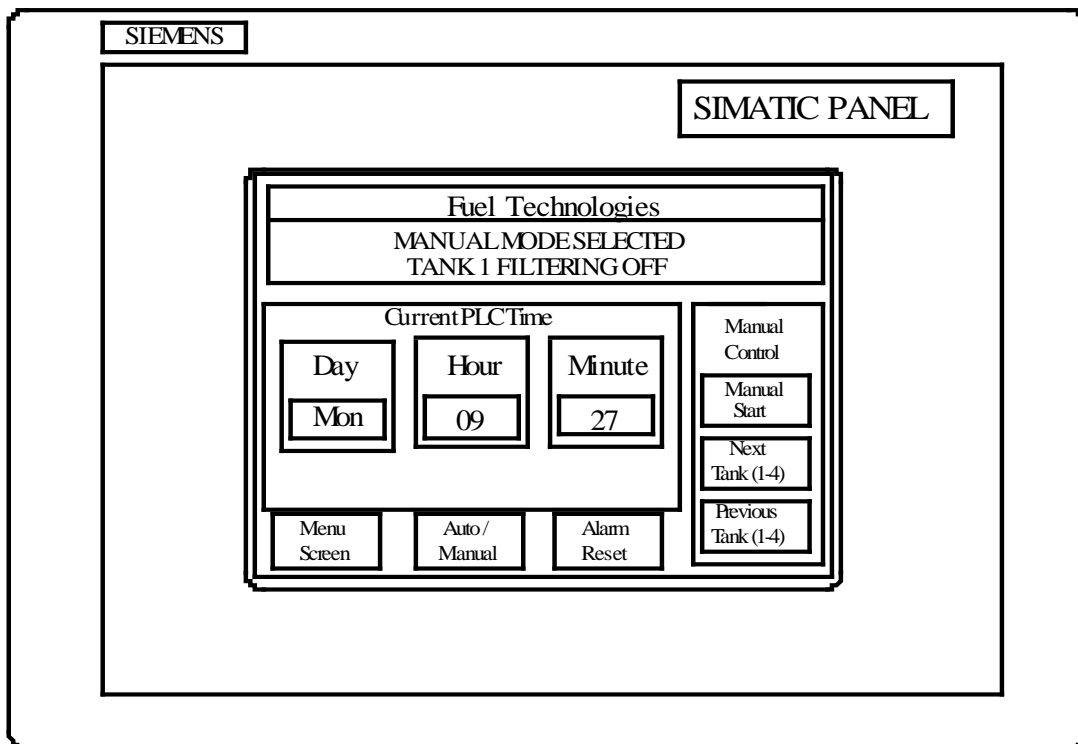

How to Cancel System Alarms

First read the Alarm Description on the screen, and then push the **Alarm Reset Button** to stop alarm and reset system. (Alarm description will appear in the MANUAL MODE SELECTED box above)

Note: The system will switch to **Manual Mode** for safety reasons when alarm status is reset. Be sure the system is in **Manual Mode**, and is not running, before attempting any maintenance operations. This is to avoid leakage or other possible hazards. Once maintenance has been performed (such as changing filters), turn system on manually to check for leaks. Then reset to **Auto Mode** and resume the scheduled program.

You Have Now Completed the Controller Set-Up

ALARM MESSAGE DESCRIPTIONS

If a problem is detected in the following areas, the unit will stop filtering, display the appropriate alarm message on the screen, and will sound an audible alarm to alert the operator. The alarm consists of a sequence of steady high-pitched beeping sounds that continue until the operator pushes the reset button and corrects the problem.

Alarm Status

Description

100 Mesh Strainer Blocked
Change & Reset

Vacuum / Strainer Gauge
Action: Change inlet strainer

10-Micron Filter Blocked
Change & Reset

10 Micron Gauge
Action: Change 10 micron filter

3-Micron Filter Blocked
Change & Reset

3 Micron Gauge
Action: Change 3 micron filter

1-Micron Filter Blocked
Change & Reset

1 Micron Gauge
Action: Change 1 micron filter

Over Pressure
Check Valves & Reset

System Pressure caused by blockage in the system or return line.
Possible reasons: Failed Solenoid valve, relief valve, or check valve.
Action: Cancel error, restart system and locate reason for high pressure.

High Water Level
Drain and Reset

Water Level Sensor
Action: Drain water from water separators.

System Leak

System Leak, Leakage has occurred somewhere in the monitored area.

Repair Leak & Reset

Action: Check for and correct leaks in monitored areas.

Generator Running
Filtering Off

This is a 24V DC contact to be used with Gen Set Run Relay. It will shut off filtration system while generator is running. (See wiring Diagram for electrical connection).

Action: *This contact is only used when FTI system is sharing the Same Fuel supply line as the Gen Set. It will turn FTI system off When the Gen Set turns on. (Do not schedule filtration system run Times on the same day of Gen Set testing).*

Pump Overload
Reset O/load & RESET

This will occur if pump/motor is over heated or over loaded.

Action: Find cause and repair

Flow Alarm

This alarm will trip if the fuel flow stops while the pump is running.

Action: Find out why pump prime was lost and repair.

RUNNING MANUAL MODE

To switch to *Manual Mode*, press the *Auto / Manual Button* until the display reads:

**MANUAL MODE SELECTED
TANK 1 FILTERING OFF**

Once in *Manual Mode*, pressing the *Manual Start Button* will turn the system *ON* and it will begin to pump fuel through the system. Pressing the same button now labeled *Manual Stop Button* will turn the system *OFF*.

If you have a multiple tank system and want to isolate a particular tank, press the *Next Tank (1-4) Button* until the display reads the tank number you wish to process. Then press the *Manual Start Button* to start the system.

RUNNING AUTO MODE

To switch to Auto Mode, press the *Auto / Manual Button* until the display reads:

**AUTO MODE SELECTED
AUTO MODE – FILTERING OFF**

The controller will now execute the schedule programmed earlier by you.

NOTE: IF POWER IS INTERRUPTED FOR ANY REASON THE PREVIOUS MODE SETTING (AUTO OR MANUAL) WILL COME BACK ON. IF IN AUTO MODE, AND THE POWER GOES OFF FOR ANY LENGTH OF TIME DURING THE SCHEDULED RUN TIME, THE SYSTEM WILL RUN THE PROGRAMMED SCHEDULE WHEN POWER IS RESUMED.

INTERRUPTING AUTO MODE

To stop the system while running in *AUTO MODE*, press the *Auto / Manual Button* until the screen says "*Manual*". (This should be done before performing maintenance tasks, such as changing filters, draining separators, etc.) To resume operation, press the *Auto / Manual Button* until "*Auto*" appears on the display. The system will now resume with the preprogrammed tasks.